


# TANK ASSEMBLY INSTRUCTION **Classic Single Head, M128, SVP and Econ Pumps**

**AWARNING** TO BE INSTALLED BY PROPERLY TRAINED PROFESSIONAL INSTALLER ONLY. READ MANUAL & LABELS FOR ALL SAFETY **INFORMATION & INSTRUCTIONS.** 

#### MOUNTING

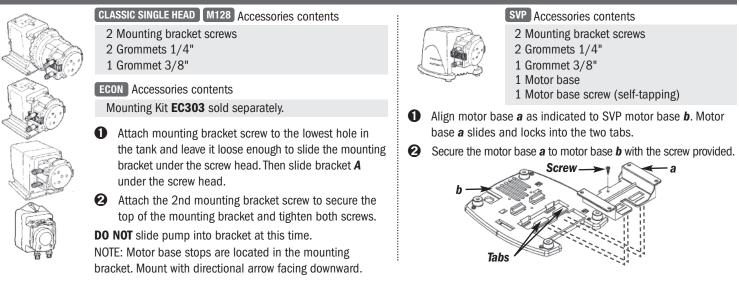

#### **II GROMMETS**

Measure and mark the two locations **B** & **C** to drill the holes. Location **C** is for 1/4" grommets only.

Drill proper hole sizes. 3/8" drill bit for 1/4" grommet; 1/2" drill bit for 3/8" grommet.

Install applicable grommets into holes. B & C show the recommended hole locations which may vary based on the application or user's requirements. **IMPORTANT!** Failure to clean all debris inside the tank prior to use may lead to pump tube rupture or malfunction.

#### **III SUCTION LINE**

Parts needed (shipped with pump)

- Suction/discharge tubing
- 1 Connecting nut
- 1 Ferrule
- 1 Weighted strainer
- Insert suction tubing through the grommet location **B** until it is 2"-3" from the bottom of the tank.
- 2 Remove fill cap.
- **3** Reach inside tank and insert 4" of tubing **D** into the strainer **E**.
- 0 DO NOT slide tubing all the way to the bottom of the weighted strainer. Tubing could become flush with the nose of the strainer and the pump may not prime due to blockage.
- Adjust tubing to maintain weight 2"-3" from the tank bottom.

**IMPORTANT! DO NOT** allow the weight to rest on the bottom of the tank.

Cut the tubing to leave approximately 9" from location **B**. The tubing will be connected to the suction side 6 of the pump head later in the installation.

#### **IV SPILL RECOVERY**

## CLASSIC SINGLE HEAD M128 SVP

NOTE: The spill recovery option can only be used with 1/4" tubing.

- Cut a 6" section of 1/4" tubing and insert through the spill recovery grommet **C**.
- Unlatch and remove pump head cover. 0
- Punch out one of two hole plugs using a 7/32" punch **F** (alternatively, you ß can use a 7/32" drill).
- 4 Reinstall pump head cover, secure latches.

### **V PUMP ATTACHMENT AND CONNECTIONS**

#### CLASSIC SINGLE HEAD M128 SVP

- **1** Slide pump into mounting bracket **A**.
- 2 Insert the end of the tubing extending out from the spill recovery grommet into the pump head cover but not inside the pump head.
- Connect suction tubing to suction side of the pump **G** with connecting nut and 6 ferrule. Connection should be "finger tight" only. DO NOT use pliers, thread tape or pipe dope.
- 4 Complete the installation with the instructions found in the pump manual.

This information is not intended for specific application purposes. Stenner Pump Company reserves the right to make changes to prices, products, and specifications at any time without prior notice.

#### ECON

ECON Not applicable.

- **1** Slide pump into mounting bracket **A**.
- **2** Connect suction tubing to suction side of the pump **G** with connecting nut and ferrule. Connection should be "finger tight" only. DO NOT use pliers, thread tape or pipe dope.
- Complete the installation with the instructions found in the 0 pump manual.

**INSTO 0716**